

## Evosta Quick Setup Guide



Please ensure pump is disconnected and isolated by a qualified engineer if any maintenance is carried out.

### Purging Pump



Set pump to Constant Speed III and run for 10 mins or vent air from brass vent plug

### Setting Pump

Constant Speed 

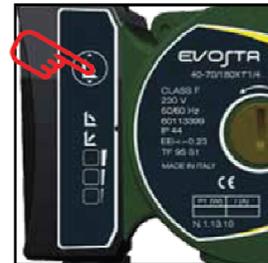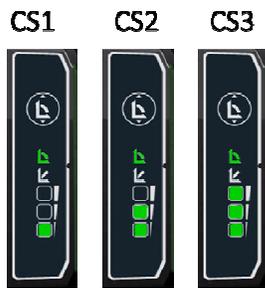

Proportional Differential Pressure 

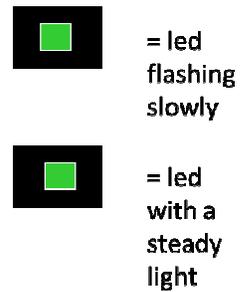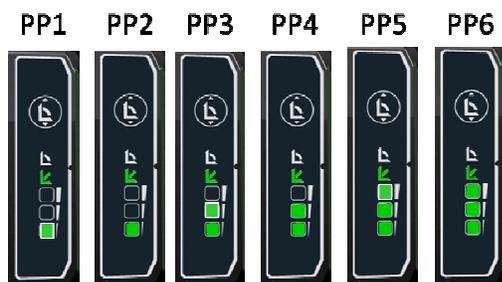

Constant Speed I = 4mtr

Constant Speed II = 5mtr

Constant Speed III = 6mtr

Proportional Speed I = Low 4mtr

Proportional Speed II = High 4mtr

Proportional Speed III = Low 5mtr

Proportional Speed IIII = High 5mtr

Proportional Speed IIIII = Low 6mtr

Proportional Speed IIIIII = High 6mtr

**Radiators:**

Set pump to Constant Speed I, II or III/Proportional Pressure either Speed I, II, III, IIII, IIIII or IIIIII

**Underfloor heating:**

Set pump to Constant Speed either Speed I, II or III

**Fault Finding**

Alarm led will flash a series of flashes:

**2xFlash** Stop **2xFlash** Stop **Pump blocked**

Reset with button, Check for blockages

**3xFlash** Stop **3xFlash** Stop **PCB/Internal failure**

Reset with button

**Please ensure pump is disconnected and isolated by a qualified engineer if any maintenance is carried out.**

If pump fails to restart after resetting please call DAB UK 01279 652776.